


Guidelines

- Relevant only if no floor drain is installed
- Base profile installed with a gap of 5 mm from the existing floor level or upper point of a bath tub/shower tray
- Respect the drying time of the sealant between each step
- Adapt the colour of the sealant to the colour of the panel.

All other rules from the current installation instructions remain valid.

Step 1

Apply sealant along the wall before installing the base profile.

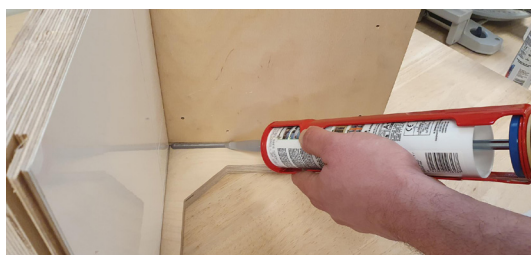

Step 2

Apply sealant behind the base profile.



Step 3

Screw the base profile to the wall.



Step 4

Apply a string of sealant in the corner.




Step 5

Install the first panel on the next wall.



Step 6

Apply sealant between the base profile and the floor.



Step 7

Remove excessive sealant with a scraper.



Generic sealing process:

- Clean the edges of the panels (also in the corners), so that masking tape sticks well to the surface
- Mask the bottom edges of the panels (also in the corners)
- Apply sealant in all gaps (make sure that the sealant is pressed deep into the gaps, so that the wooden edges are properly sealed).

Final result (sealed transitions)

Position of the sealant on the bottom of the walls.

